



NOTES:

1. ALL DISCONNECTED PIC PINS TERMINATE AT HEADER
2. USB CONNECTOR-MOUSER 806-KUSBX-SMTBS1NB30
3. C1 - DIGIKEY 511-1471-1-ND
4. C4 - MOUSER 80-C0805C105M4R
5. ALL LEDS 1206 SMT PACKAGE
6. ALL RESISTORS 0805 SMT PACKAGE
6. ALL CAPACITORS 0805 SMT PACKAGE